

**DART**

DESIGN <i>PH</i>	DRAWN BY <i>PH</i>	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>[Signature]</i>	APPROVED <i>[Signature]</i>	DRAWING NO. DSI 9372	REV. A SHEET 1 OF 2
DATE 07.03.19		TITLE STAINLESS STEEL WEARSHOE KITS	SCALE NTS
A	07.03.19	NEW ISSUE	

## **DART SERVICE INSTRUCTION**

**TO AMEND INSTALLATION INSTRUCTIONS D205-634 REV. D OR EARLIER AND  
INSTALLATION INSTRUCTIONS D204-635 REV. D OR EARLIER**

REF. CANADIAN STC: SH96-88 ISSUE 3

REF. FAA STC: SR00563NY

For customers with D205-634-011 skidtubes at CHG 004 or earlier and D205-634-015 skidtubes at CHG 003 or earlier who would like to upgrade to stainless steel wearshoes, the DSI 9372-011 wearshoe kit can be obtained from Dart

or

For customers with D204-635-011 skidtubes at CHG 004 or earlier who would like to upgrade to stainless steel wearshoes, the DSI 9372-013 wearshoe kit can be obtained from Dart

QTY -011	QTY -013	Part Number	Description
X		DSI 9372-011	WEARSHOE KIT (D205-634-011/-015 SKIDTUBES)
	X	DSI 9372-013	WEARSHOE KIT (D204-635-011 SKIDTUBES)
1		D3564-5	WEARSHOE (REPLACES D2577-5)
	1	D3564-7	WEARSHOE (REPLACES D2577-7)
1	1	D3564-9	WEARSHOE (REPLACES D2577-1)
1	1	D3564-11	WEARSHOE (REPLACES D2577-3)
1	1	D3564-13	*WEARSHOE
2	2	D3566-1	GASKET
1		D3566-5	GASKET
	1	D3566-7	GASKET
1	1	D3566-13	*GASKET
50	44	AN3C4A	BOLT
50	44	AN960C10L	WASHER
6	6	ALS4-1032-130	*INSERT

\* OPTIONAL TO INSTALL

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01

**APPROVED**

BY: *[Signature]*  
D. SHEPHERD (DE # 02)


DATE: 07.03.19  
CERT. NO.: SH96-88  
ISSUE NO.: 3

**Copyright © 2007 by DART AEROSPACE LTD**


THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

**DART**

DESIGN <i>PH</i>	DRAWN BY <i>PH</i>	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>PH</i>	APPROVED <i>PH</i>	DRAWING NO. DSI 9372	REV. A SHEET 2 OF 2
DATE 07.03.19	TITLE STAINLESS STEEL WEARSHOE KITS		SCALE NTS

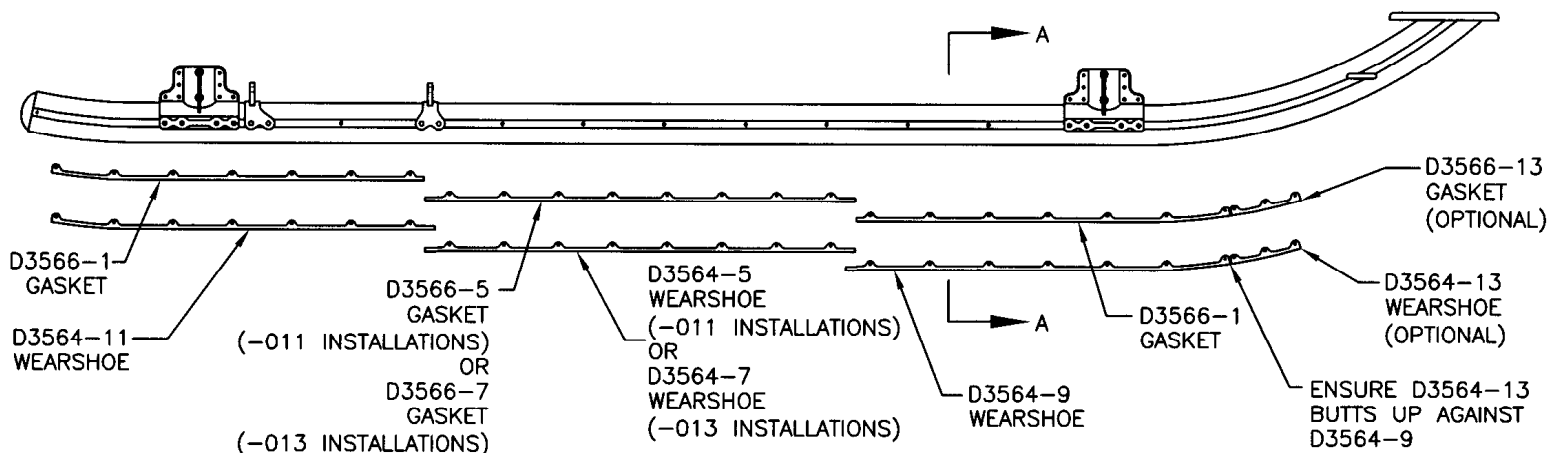

**FIGURE 1: DSI9372-011/-013 WEARSHOE KIT INSTALLATION**  
(D205-634-011 SKIDTUBE SHOWN, D204-635-011 SIMILIAR)

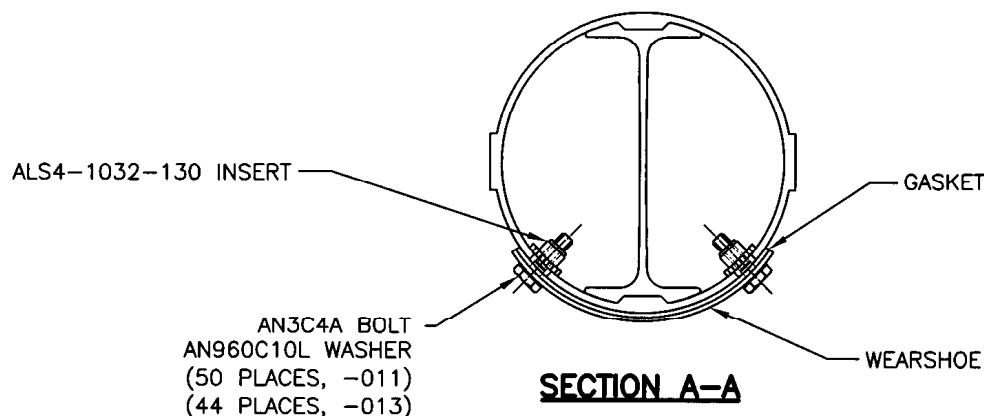

#### DSI 9372-011/-013 Wearshoe Kit Installation Procedure

- 1) Remove skidtube from aircraft per Section 32.1 of ICA-D205-634 or ICA-D204-635.
- 2) Remove existing D2577-1/-3/-5/-7 wearshoes by removing AN3 hardware. Begin wearshoe removal from the fwd end of the skidtube towards the aft end.  
**Note:** Removing the wearshoes may require breaking a layer of sealant between the wearplates and the skidtube.
- 3) Clean residual sealant off the bottom of the skidtube. Check for corrosion and mechanical damage in accordance with Chapter 5 of ICA-D205-634 or ICA-D204-635 and repair as required.
- 4) **Installation of D3564-13 Wearshoe and D3566-13 Gasket (optional)**  
Temporarily install the D3564-9 wearshoe complete with D3566-1 gasket at the fwd end of the skidtube as shown in Figure 1. Temporarily clamp the D3564-13 wearshoe and D3566-13 gasket ensuring that the wearshoe butts up against the D3564-9 wearshoe. Using the D3564-13 wearshoe as a template, drill  $\varnothing 0.125$  holes in the center of the wearshoe oboonds (6 places). Remove wearshoes and open the  $\varnothing 0.125$  holes to  $\varnothing 0.297$ . Deburr. Touch up holes with chemical film material (Alodine 1200/1201) per MIL-C-5541 and one coat of MIL-P-85582 or MIL-P-23377 primer. Install ALS4-1032-130 inserts.
- 5) Install D3564-5/-7/-9/-11/-13 wearshoes complete with D3566-1/-5/-7/-13 gaskets using AN3C bolts beginning from the aft end of the skidtube and install towards the fwd end of the skidtube as shown in Figure 1. Seal all bolts with Sikaflex-241/-291 or Proseal 890 or MIL-S-8802 Class 'B2' sealant before installing. Torque bolts to 15-25 in-lbs (1.7-2.8 N-m).
- 6) Re-install skidtube on aircraft per Section 32.2 of ICA-D205-634 or ICA-D204-635.

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01

**APPROVED**

BY: *[Signature]*  
D. SHEPHERD (DE # 02)

DATE: 07.03.19  
CERT. NO.: SH96-88  
ISSUE NO.: 3

**Copyright © 2007 by DART AEROSPACE LTD**

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.